


A1018B – OUTDOOR RECEIVER KIT (REMOTE SWITCH UHF 12/24Vd.c.)



Features:

1. 2 Channels (A & B) independently set-up.
2. Buttons have slide protector to prevent accidental activation.
3. Can learn over 100 transmitter codes
4. Hopping (Rolling) Code technology – Provides a secure encrypted radio frequency (RF) transmission.

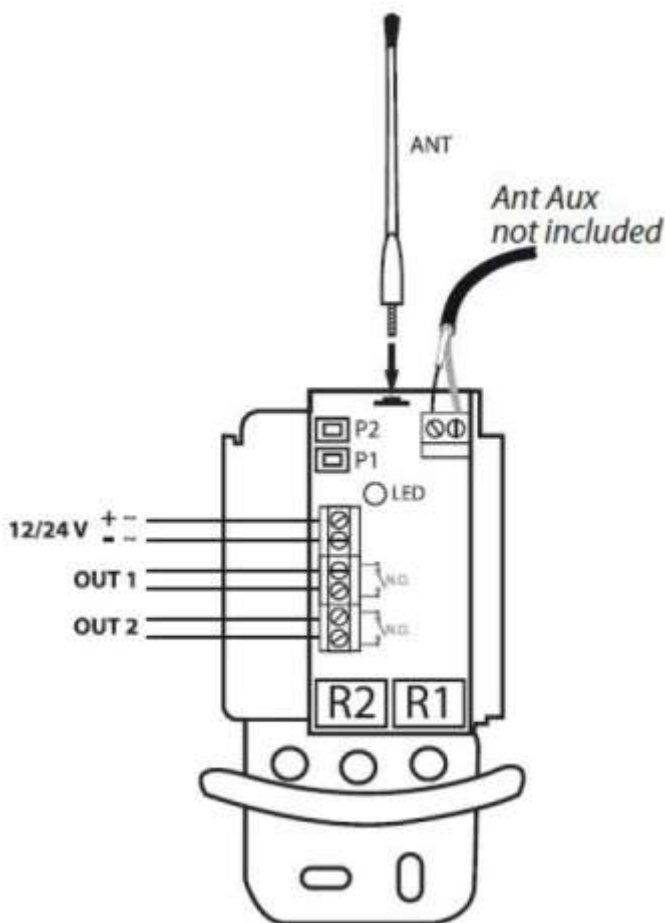

ONE time to program R1 in monostable mode - LED flashes one time and stays alight, then press the button that you want the unit to learn, until the LED goes off. Channel R1 has successfully learned the code. The control mode of relay is non-locking (state A).

TWO times to program R2 in monostable mode - LED flashes two times and stays alight, then press the button that you want the unit to learn, until the LED goes off. Channel R2 has successfully learned the code. The control mode of relay is non-locking (state B).

THREE times to program R1 in bistable mode - LED flash three times and stays alight, then press the button that you want the unit to learn, until the LED goes off. Channel R1 has successfully learned the code. The control mode of relay is interlocking (state C).

FOUR times to program R2 in bistable mode - LED flash four times and stays alight, then press the button that you want the unit to learn, until the LED goes off. Channel R2 has successfully learned the code. The control mode of relay is interlocking (state D).

Note: If you press P1 many times, the state D will deactivate. Hold down the key of the radio remote control that you would like to acquire until the led blinks.

Learning Mode: Programming:

NOTE: The radio control units included in the pack are already programmed and ready to use.

See the above diagram to find the correct buttons to press.

Press the P1 as instructed below to enter different modes:

Deleting Programmed Codes:

There are two ways of deleting saved codes:

1. Deleting a single code -Press P2 button for about two seconds and release. The LED will light up.

A1018B – OUTDOOR RECEIVER KIT (REMOTE SWITCH UHF 12/24Vd.c.)

Then press the key on the radio remote control that you want to delete.

2. Deleting all codes acquired (Reset unit) - Press P2 button until the LED turns on (about 8 seconds) and then release. Repeat the learning process.

Technical Parameters:

Power Supply	9V - 24V AC / DC
Frequency	433.92 MHz
Max Consumption	200 mA
Decoding	Binary
No. of Max Codes	140
No. of Channels	2
No. of Outputs	NO / NC 2
Max Switching Power	0.5 A / 120 VA
Operating Temperature	-20/ + 50 °C
Working Distance	100 meters
Relay Spec	12A 14V DC or 7A 120V AC

Notes for Installation:

WARNING! It is important the following manual should be followed for safety reasons. Store the instructions for future reference. Anything not expressly envisaged in these instructions is not permitted.

The packaging materials should be kept out of the reach of children since they are potentially hazardous.

The product must only be installed by a qualified installer. Incorrect installation or improper use of the product can lead to severe damage to property and / or persons.

The manufacturer declines all responsibility resulting from improper use of device. Do not modify the device in any way.

Disconnect the power supply prior to any intervention on the system. The status of the system has a direct influence on the reliability and safety of the device.

WWW.ALTRONICS.COM.AU