 


TR3150 RC DRONE WITH 720P ONE AXIS GIMBAL CAMERA RECORDER WLTOYS Q303-B

Quick Start Guide

1. Please ensure that the TR3150 Q303 DRONE is fully charged prior to operating.
2. Connect the Mains Power Adaptor to the Balance Charger.
3. Download the Q303 WiFi APP "WL UFO" from iTunes or Google Play or simply scan the QR code shown in the manual supplied.
4. Insert the Q303 Battery pack to the battery adaptor and insert into the Balance Charger. Charging can take up to 150 minutes.

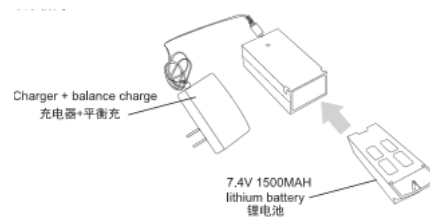

5. Install 4 x AA batteries into the remote controller.
6. Drone battery is fully charged, insert the Rechargeable battery into the Q303 battery compartment. Inserting the battery will turn the Drone on.
7. Place the Q303 Drone in an open level surface.
8. Turn the remote controller on. After 3 seconds the controller will beep to confirm pairing process.
9. Connect the Q303 Drone via Wi-Fi to your smartphone. Open the Wi-Fi settings on your smartphone and select the Q303 Wi-Fi FPV Drone.
10. To proceed with flying the Q303 Drone, place the left-hand joystick to the bottom left hand corner and the right-hand joystick to the bottom right corner simultaneously. This will initiate the flight sequence and begin to spin the propellers.



11. As soon as the propellers start to spin, return both left and right hand joysticks to the middle (neutral) position carefully.
12. You may now proceed to fly the drone outdoors.

Note:

1. Ensure to fly the Q303 Drones outdoors only following CASA Drone flight regulations.
<https://www.casa.gov.au/modelaircraft>
2. During flight initiation process, ensure to carefully return the left and right hand joystick to middle (neutral) position carefully.
3. After landing the Q303 Drone, ensure to lock the Q303 drone to avoid accidental take off by placing the left-hand joystick to the bottom left hand corner and the right-hand joystick to the bottom right corner simultaneously.

