


TR3154 RC FPV DRONE WITH 720P ONE AXIS GIMBAL CAMERA RECORDER WLTOYS Q303-A

Quick Start Guide

1. Please ensure that the TR3154 Q303 FPV DRONE is fully charged prior to operating.
2. Connect the Mains Power Adaptor to the Balance Charger.
3. Insert the X300 Battery pack to the battery adaptor and insert into the Balance Charger. Charging can take up to 150 minutes.

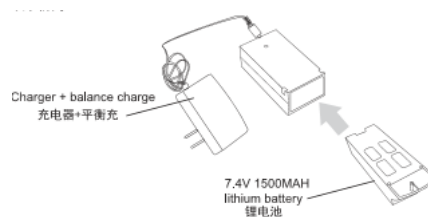

4. Install 4 x AA batteries into the remote controller.
5. Once the Q303 FPV Drone battery is fully charged, insert the Rechargeable battery into the Q303 battery compartment. Inserting the battery will turn the Drone on.
6. Place the Q303 Drone in an open level surface.
7. Turn the remote controller on. After 3 seconds the controller will beep to confirm pairing process.
8. Insert the FPV LCD Screen into the slot located on top face of the remote controller.
9. Turn the FPV LCD Screen on. The slide switch is located on the right-hand side of the screen.
10. The video will be automatically streamed to the FPV LCD Screen.
11. To proceed with flying the Q303 FPV Drone, place the left-hand joystick to the bottom left hand corner and the right-hand joystick to the bottom right corner simultaneously. This will initiate the flight sequence and begin to spin the propellers.



12. As soon as the propellers start to spin, return both left and right hand joysticks to the middle (neutral) position carefully.
13. You may now proceed to fly the drone outdoors.

Note:

1. Ensure to fly the Q303 Drones outdoors only following CASA Drone flight regulations. <https://www.casa.gov.au/modelaircraft>
2. During flight initiation process, ensure to carefully return the left and right hand joystick to middle (neutral) position carefully.
3. After landing the Q303 Drone, ensure to lock the Q303 drone to avoid accidental take off by placing the left-hand joystick to the bottom left hand corner and the right-hand joystick to the bottom right corner simultaneously.

