


Instruction for 2WD Motor Chassis Kit

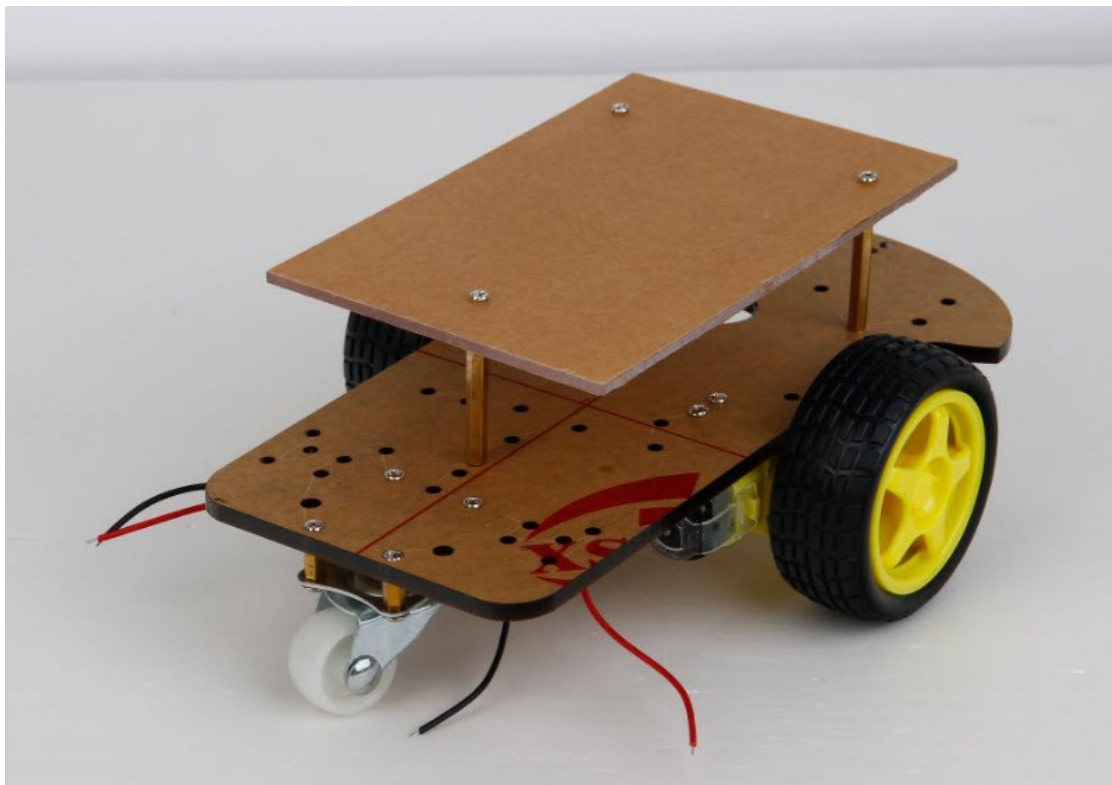



Full parts:



Tool:





Step 1: Fix the Motor

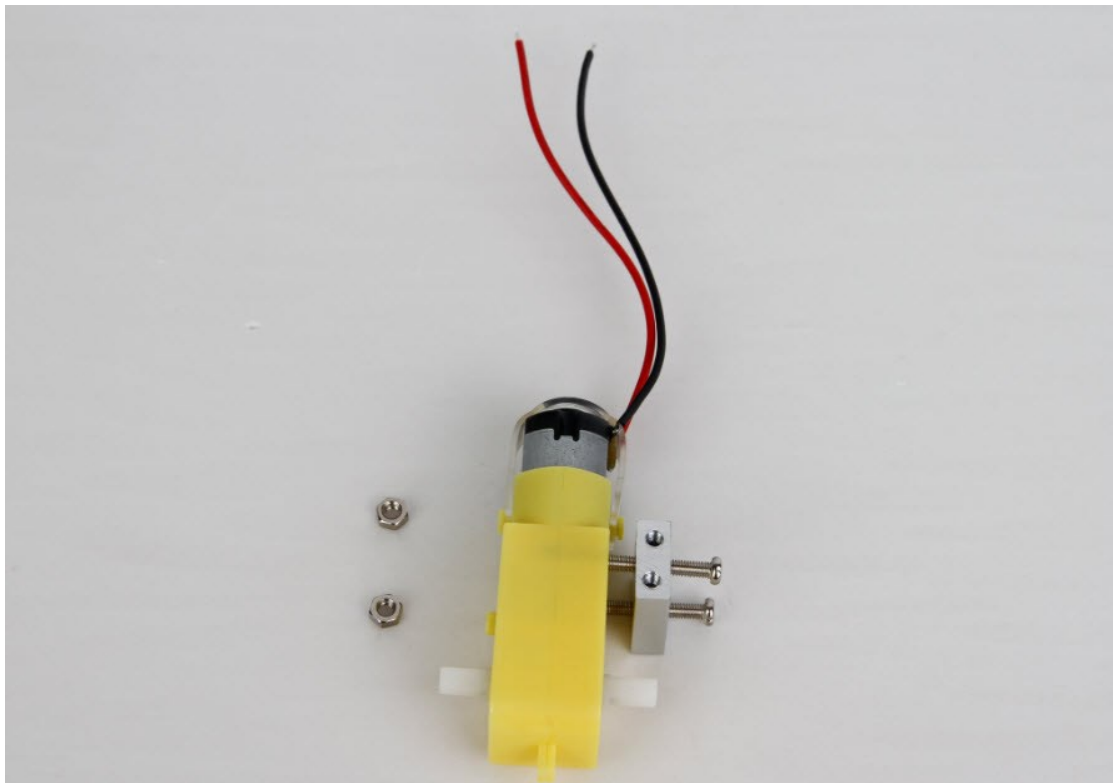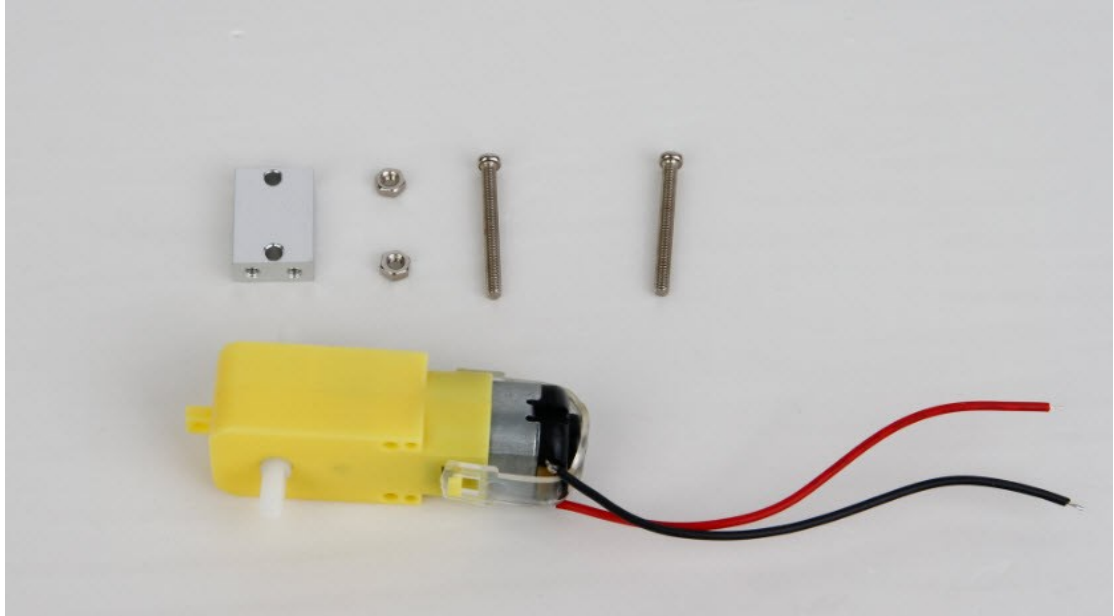






Step 2: Fix the wheel

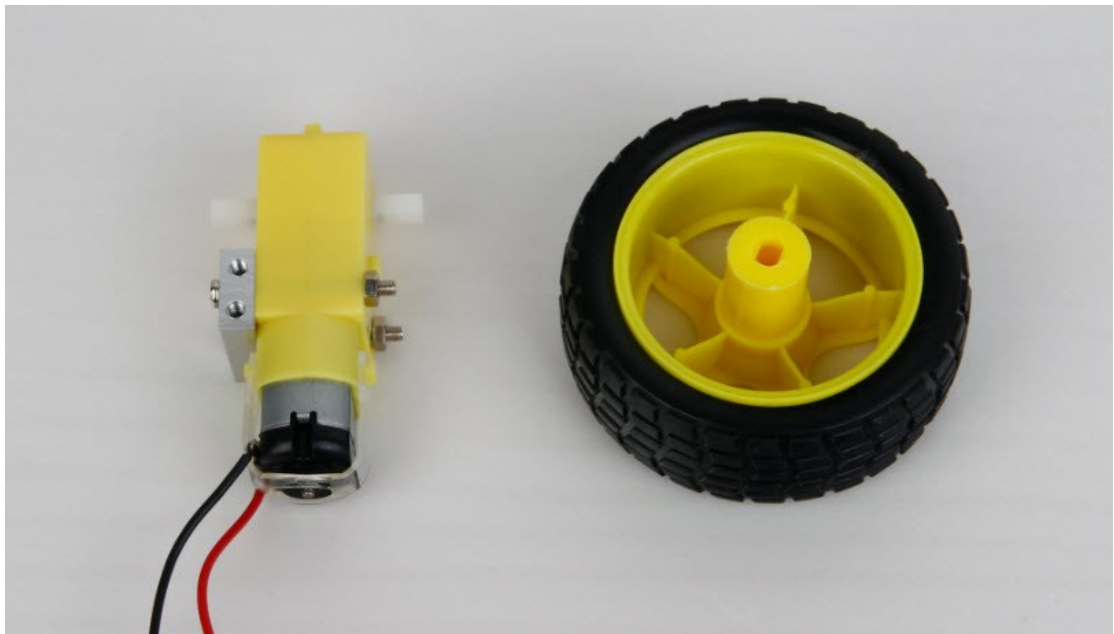


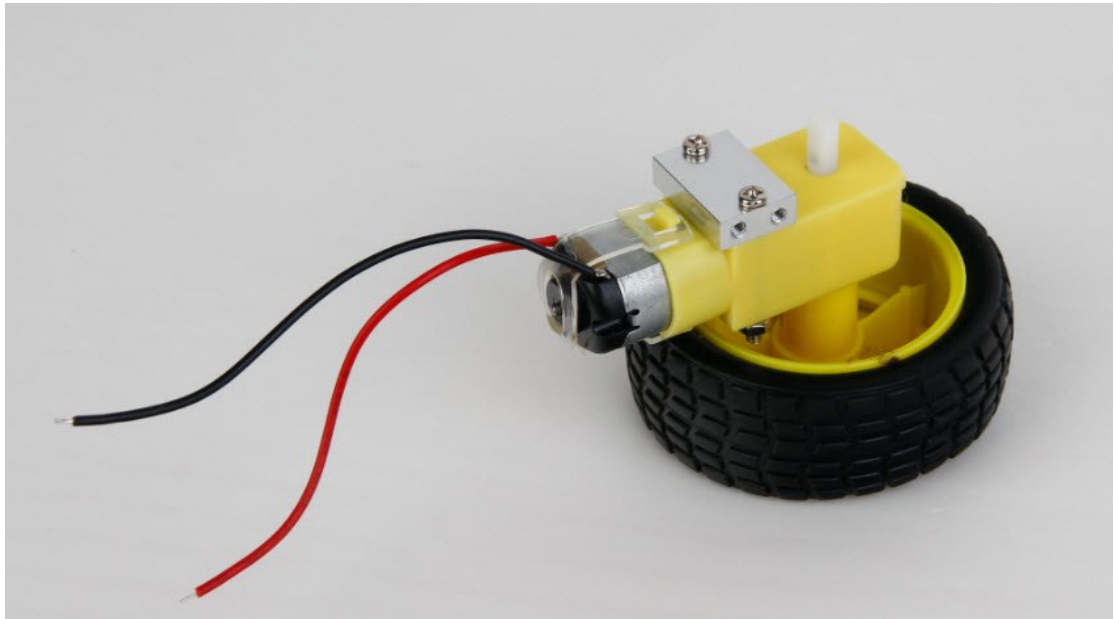


Step3: Fix the bottom board, using the hole 1 and 2 on the board.


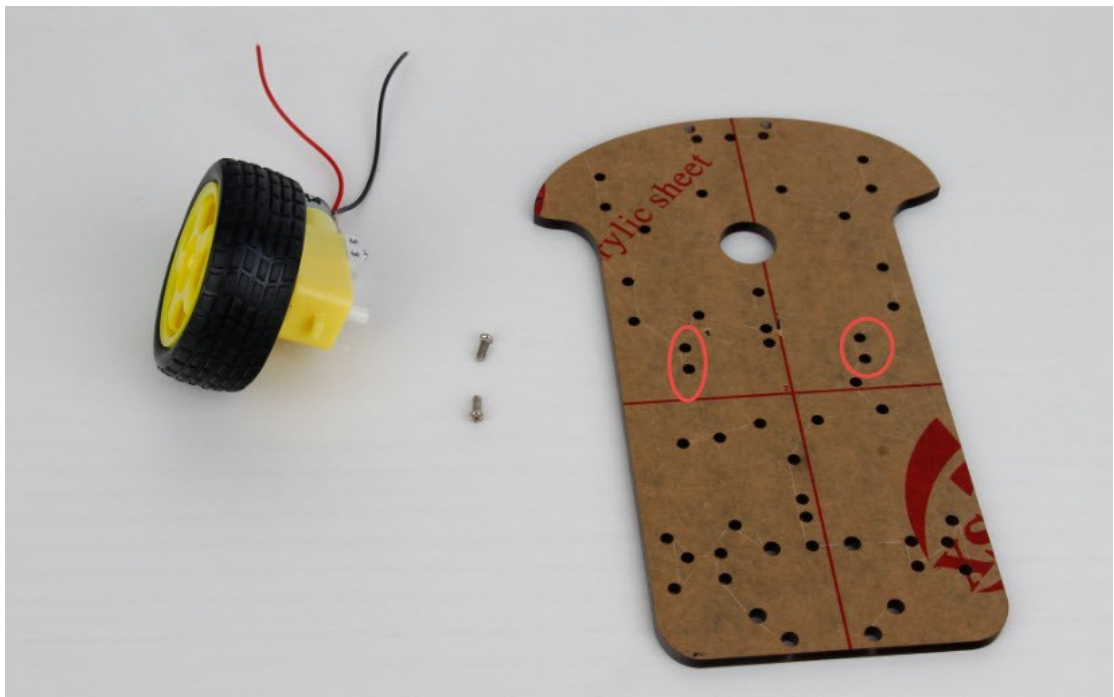


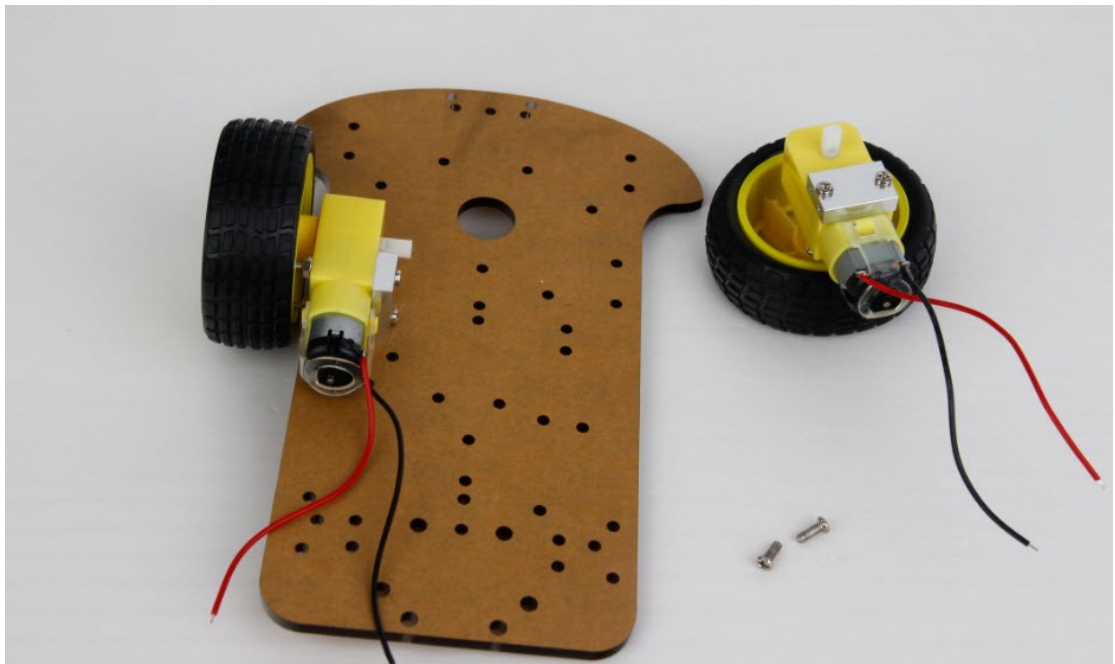
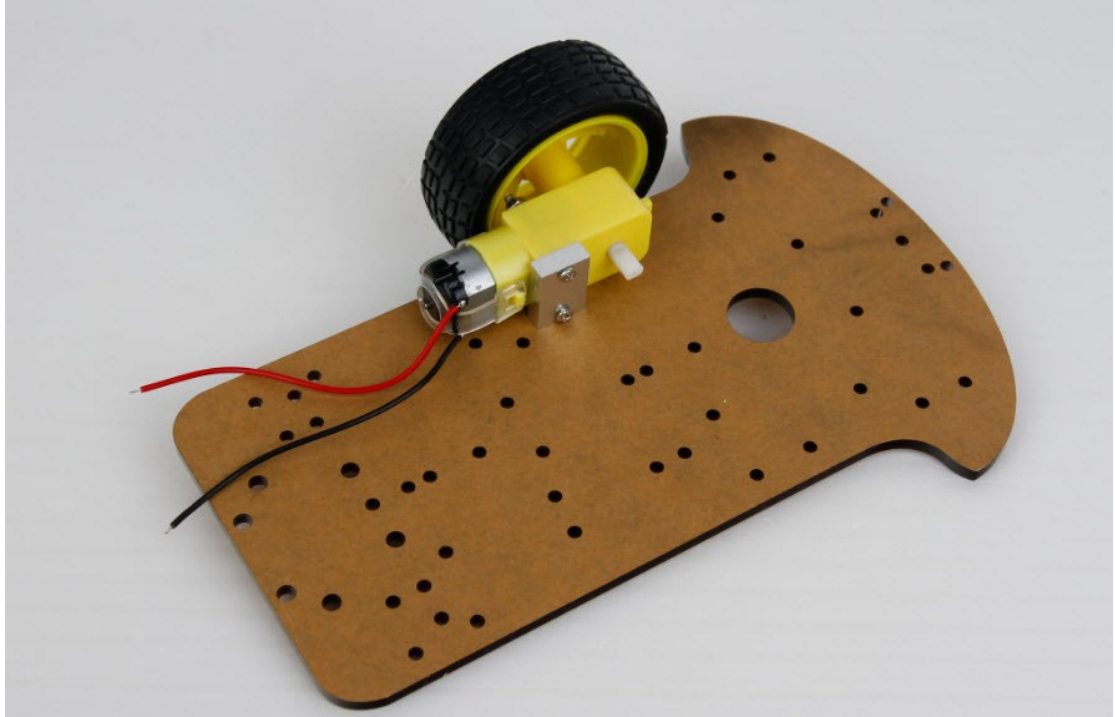


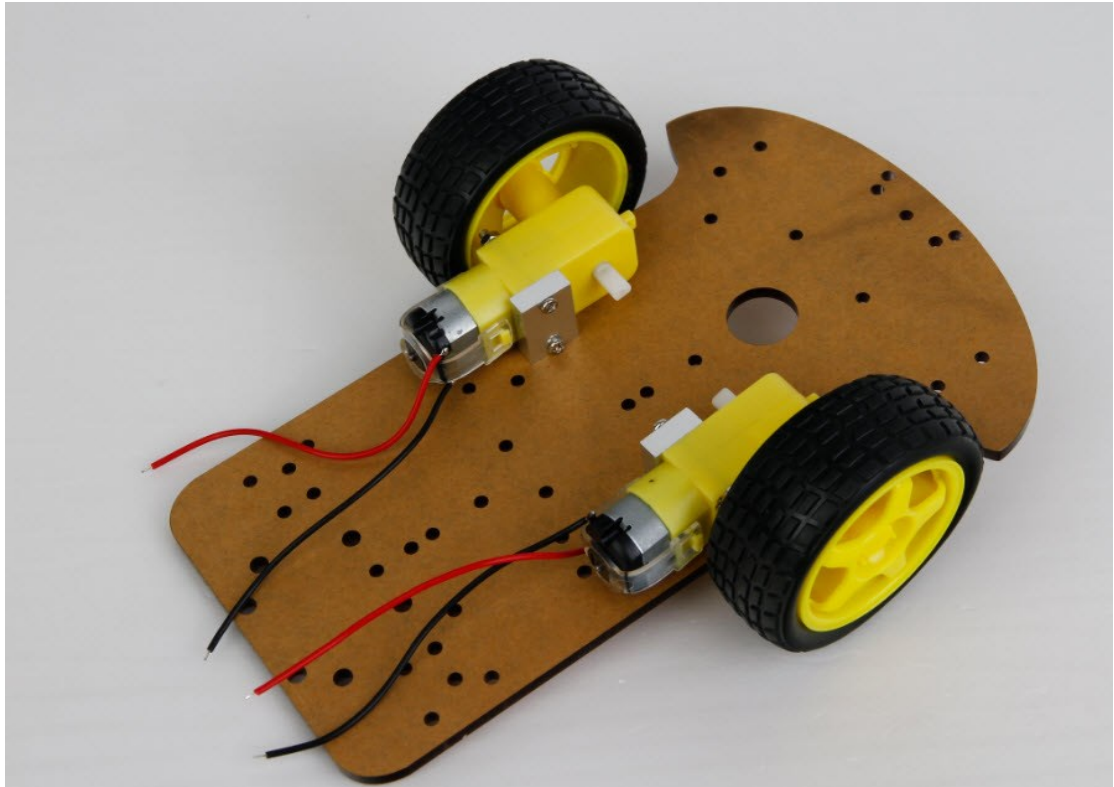


Step4: Fix the Universal wheel

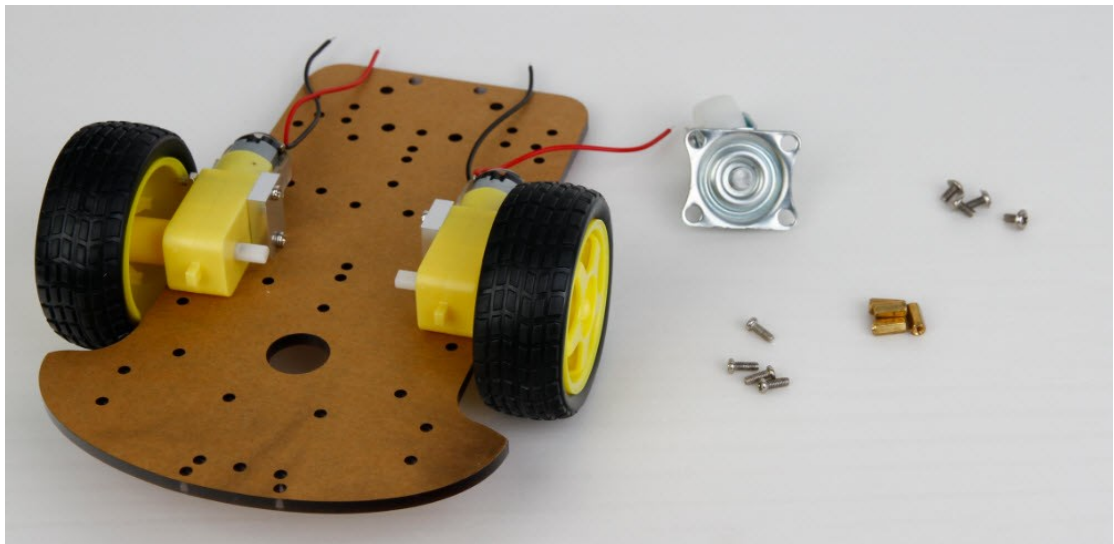


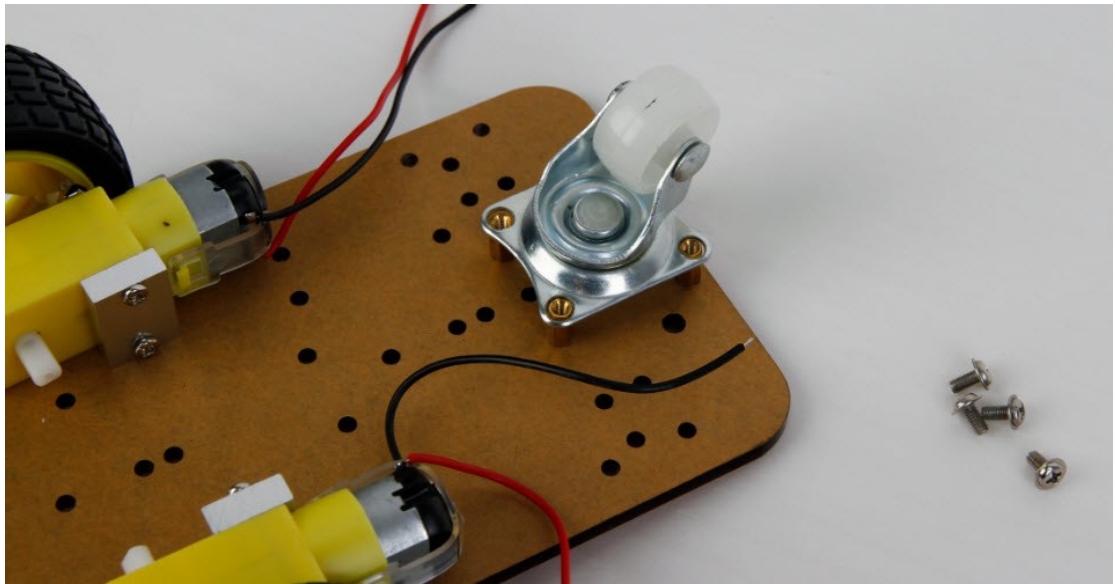
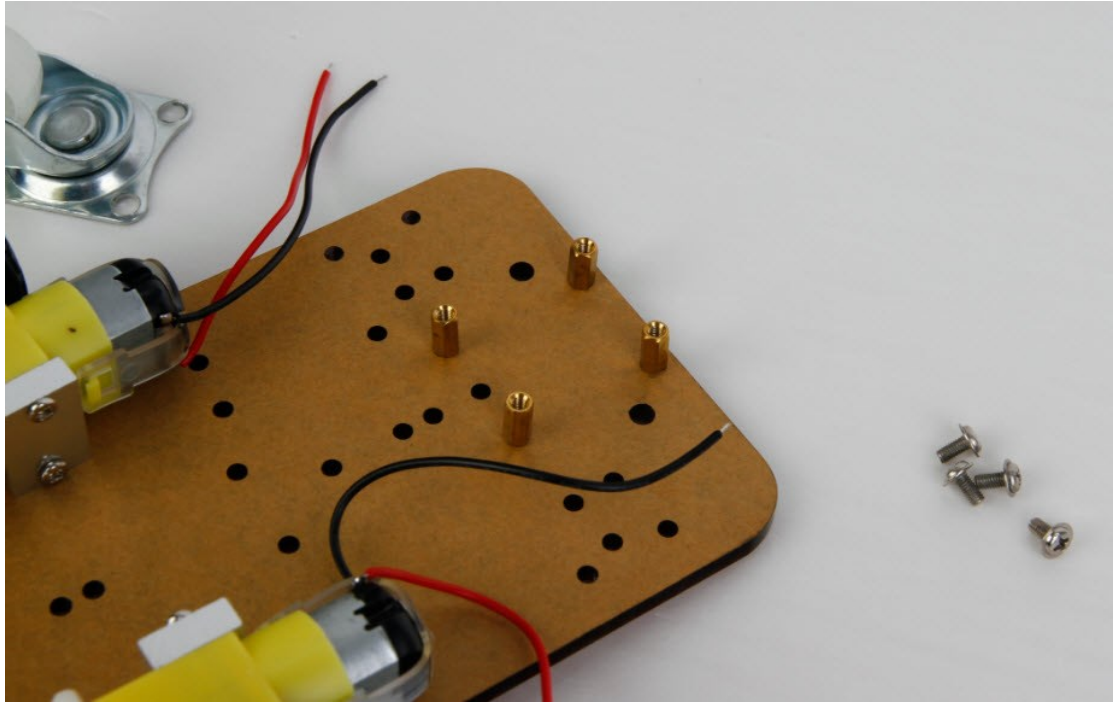


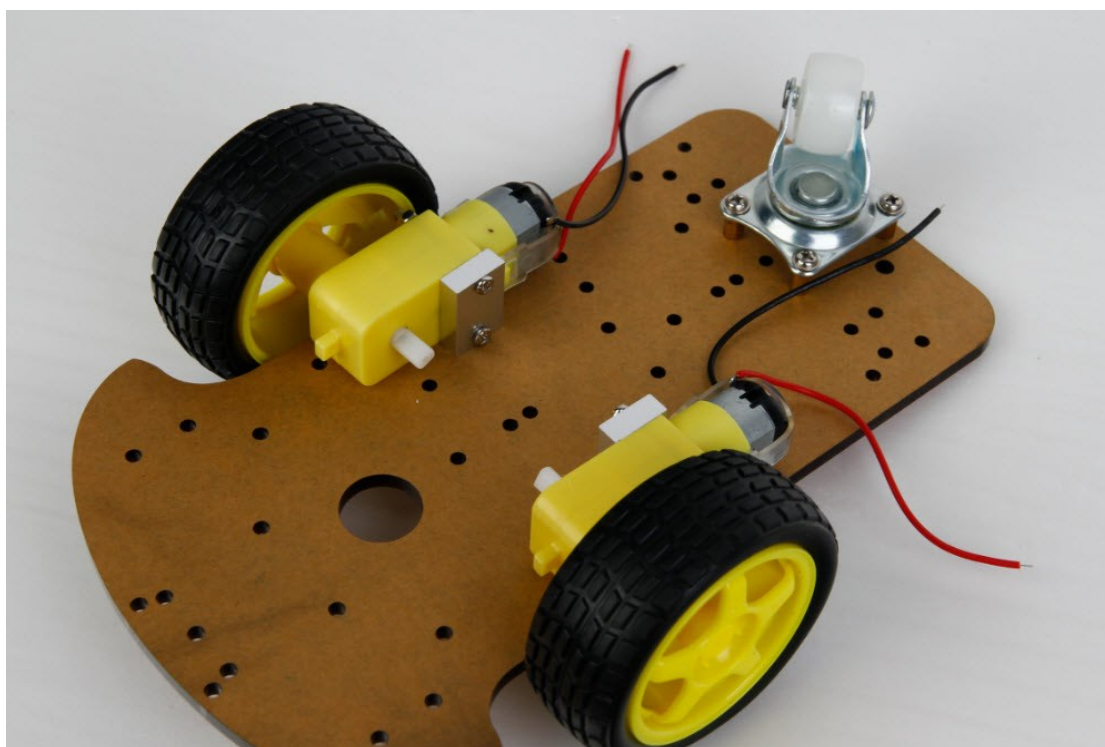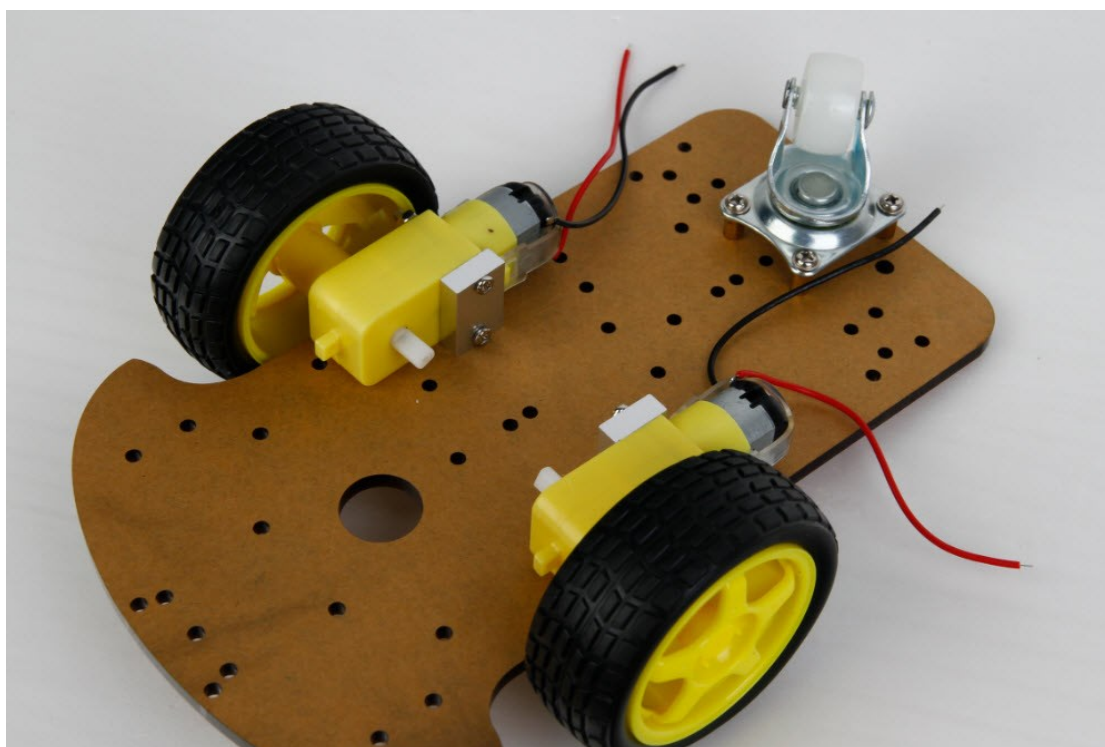


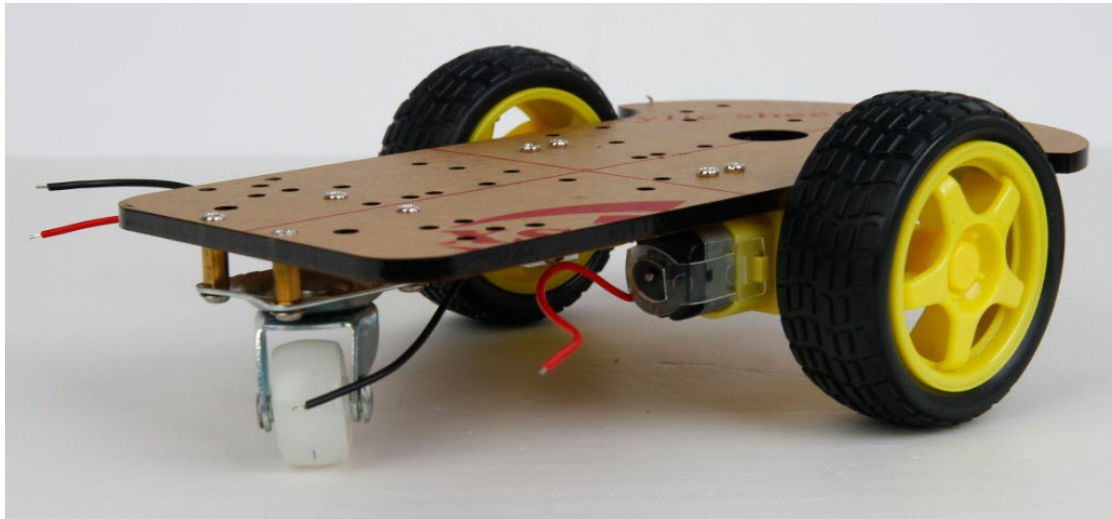

Step 5: Fix the top board, using the hole 3,4 and 5.

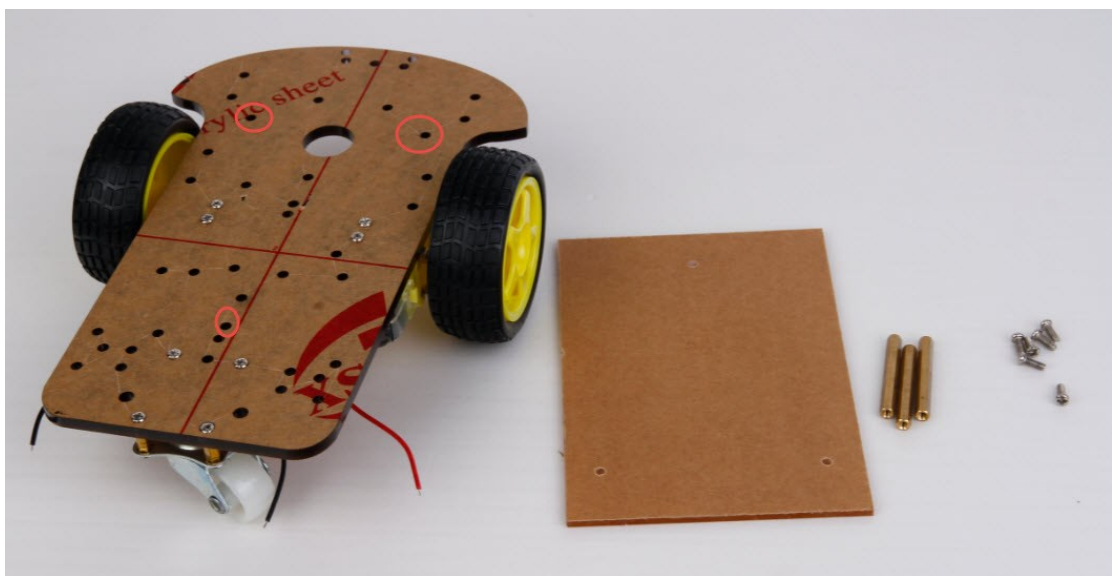

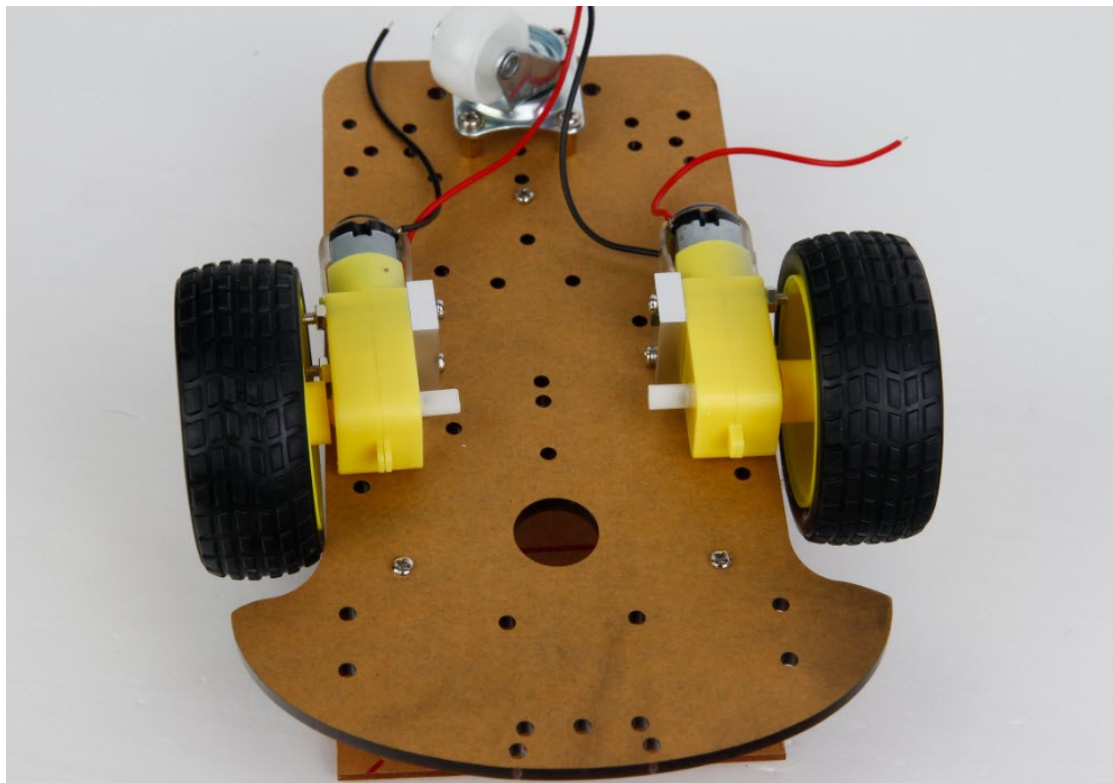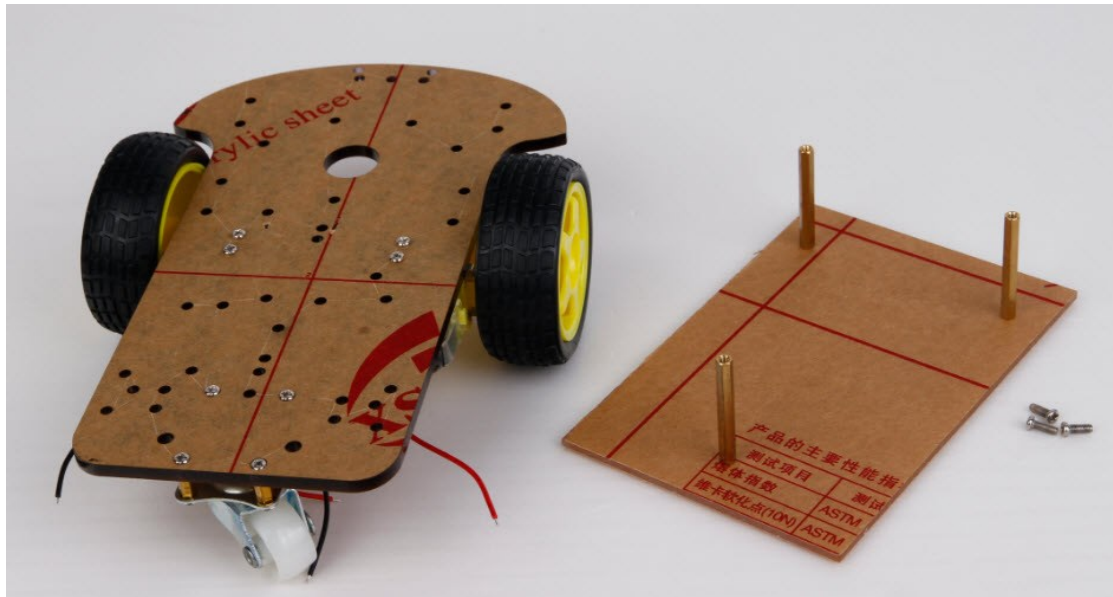

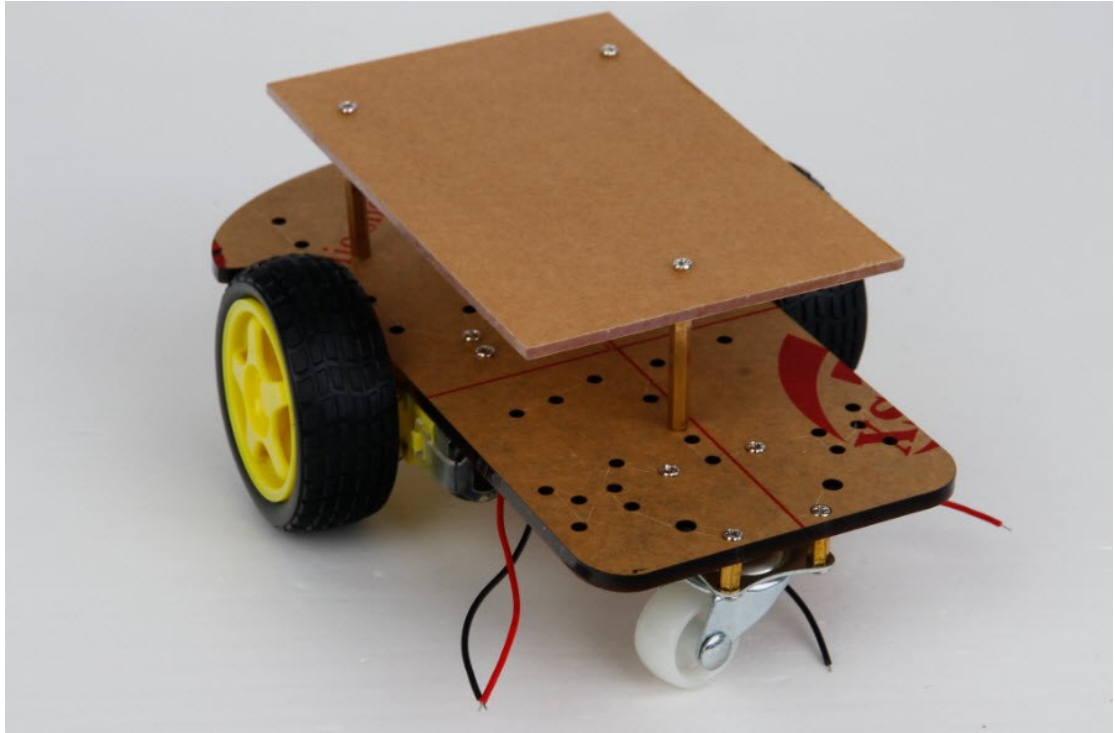

The End