

# **USER      MANUAL**

---

## **HDMI TO DVB-T Modulator**

### **HDMI Extender By Coaxial**

**Model No: HDEX0011M1**

**Enjoy the vivid world!**

#### **REMARK**

**Manufacturer does not make any commitment to update the information contained herein.**

## Dear customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

The products are designed to make your A/V device use more convenient, comfortable, productive and cost-efficient.

The HDMI TO DVB-T Modulator can convert HDMI signal to HD digital TV signal based on DVB-T CATV transmission mode. The product applies RF modulation technology characteristic to realize the HD signal to HD digital TV signal conversion and transmit via coaxial cable over long distance up to 500 meters. By a CATV network mixer, the Modulator over Coaxial cable supports pair to pair and multiple to multiple video matrix.

Our devices offer solutions for noise, space and security concerns, data center control, information distribution, conference room presentation, school and corporate training environments.


## INTRODUCTION

### FEATURES:

- Supports a HDMI input and a F type/BNC RF output.
- Support HDMI resolution up to 1080P/60Hz.
- Output signal accord with the relevant DVB-T standards, and it can be compatible with any DVB-T TV or receiver.
- Transmission distance up to 500 meters by SYV-75-5 coaxial cable and no need amplification.
- Support 80 channels for option; frequency ranges 139MHz~950MHz.
- Products using the broadcast signal transmission mode, only one line can transmit 48 channels of high-definition video signal at the same time.
- By a CATV network mixer, the Modulator over Coaxial cable supports pair to pair and multiple to multiple video matrix.
- The use of digital TV communication protocol, anti interference and error correction capability is very strong.
- Installs in minutes. The use of the existing CATV transmission network, no need wiring.
- By using a special receiver (HDEX009M1), you can decoding DVB-T signal and output HDMI HD signal for non DVB-T TV/Monitor.

## PACKAGE CONTENTS:

- 1. AC power adapter 1pcs
- 2. User manual 1pcs

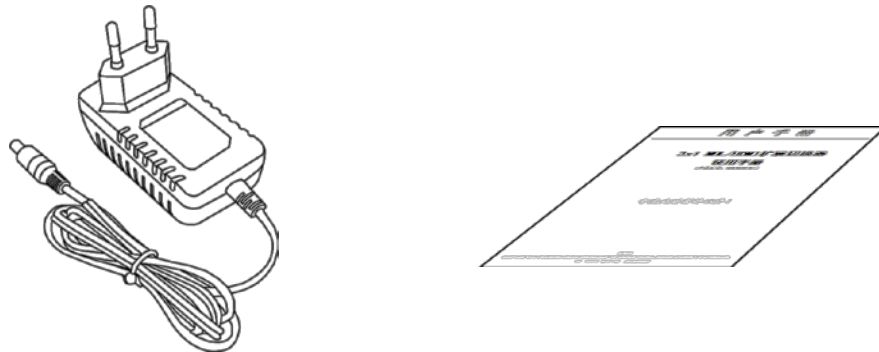

## FEATURES OF THE INTERFACE:

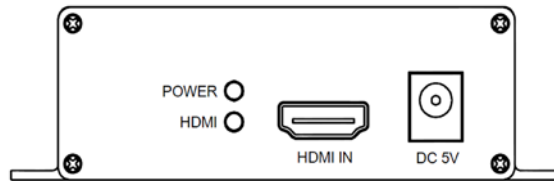


FIG.1 Front Panel View

**PWR LED:** POWER ON/OFF indicator

**HDMI LED:** HDMI input indicator

**HDMI IN:** HDMI signal input

**DC5V:** 5V DC in jack



FIG.2 Rear Panel View

**CHANNEL:** Channel selection switch

**RF OUT:** RF signal output

# OPERATION AND CONNECTION:

## I .Pair to Pair mode

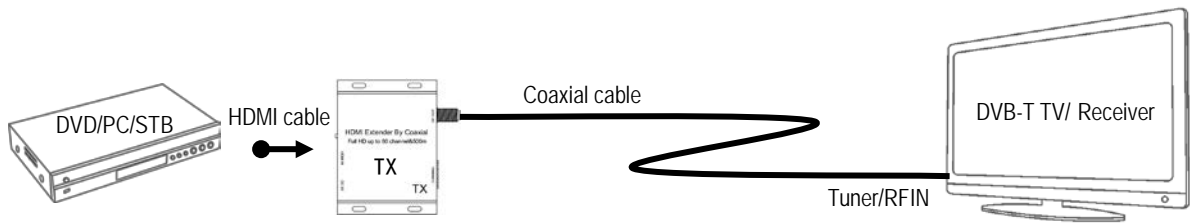


FIG.3 CONNECTION DIAGRAM

1. Connect one SYV-75/RG59 coaxial cable from Modulator (TX) RF OUT into the DVB-T Receiver Tuner /RF IN.
2. Connect one HDMI cable from signal source into the HDMI input port of TX.
3. Set same channel for TX and Receiver (Detailed setting method reference behind the table).
4. Connect adapter power supply to the TX.

## II . One to multiple Splitter mode

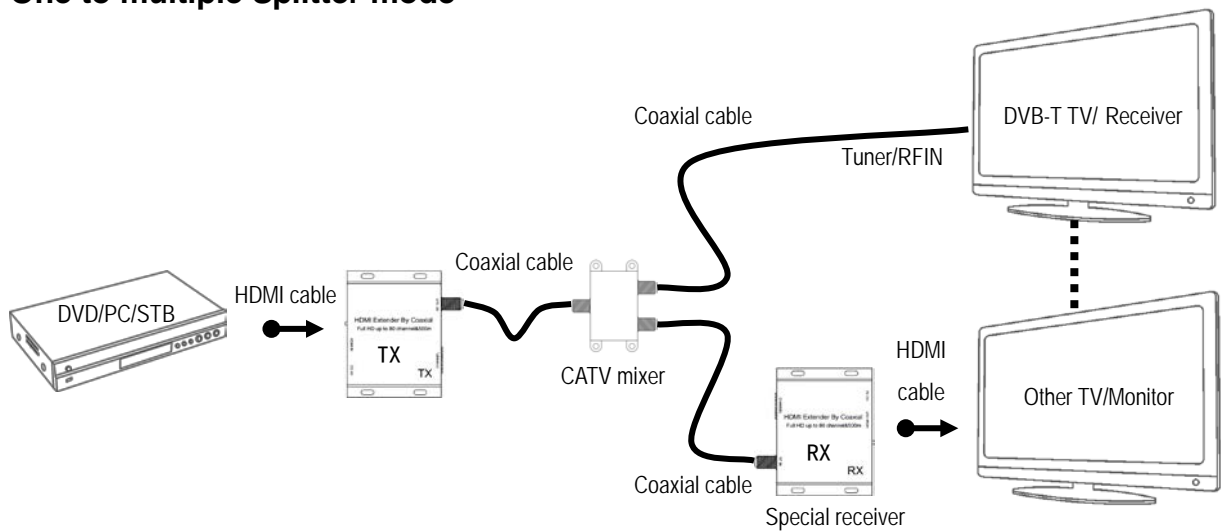


FIG.4 SPLITTER CONNECTION DIAGRAM

1. Connect one SYV-75/RG59 coaxial cable from TX RF OUT into the input port of CATV mixer.
2. Connect coaxial cables from DVB-T Receiver RF IN into the output ports of CATV mixer.
3. Connect one HDMI cable from signal source into the HDMI input port of TX.
4. Set same channel for TX and Receiver (Detailed setting method reference behind the table)
5. Connect adapter power supply to the TX.
6. Note: The CATV mixer and Special receiver are not included in the package list, you need to buy another.

### III. Multiple to Multiple Matrix mode

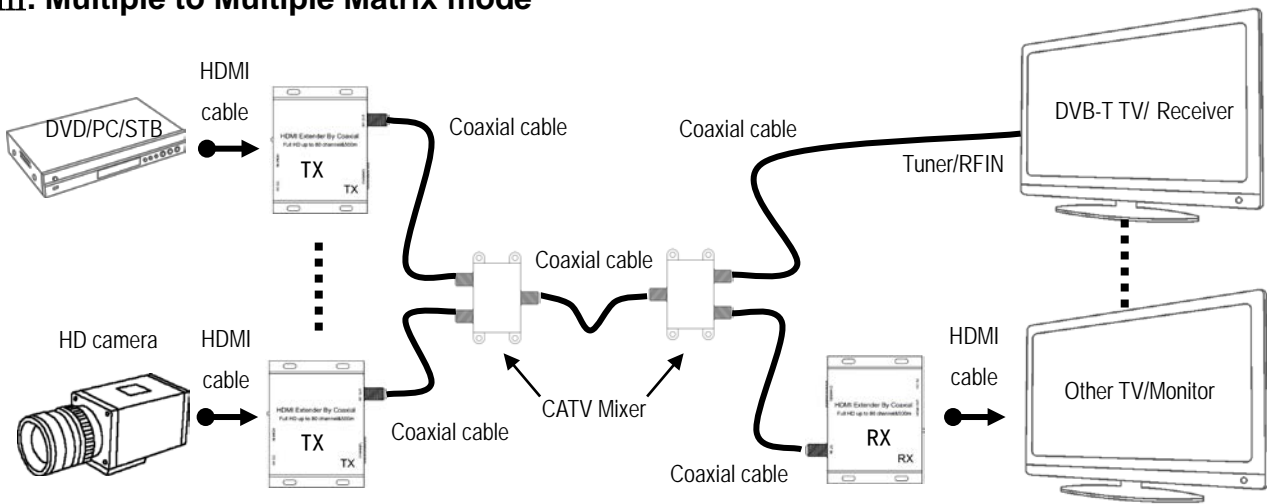


FIG.5 MATRIX CONNECTION DIAGRAM


1. Connect SYV-75/RG59 coaxial cables from TX RF OUT into the output ports of CATV mixer.
2. Connect coaxial cables from DVB-T Receiver RF IN into the output ports of CATV mixer.
3. Connect input ports of two CATV mixers with one SYV-75/RG59 coaxial cable.
4. Connect HDMI cables from signal source into the HDMI input port of TX.
5. Set same channel for TX and Receiver (Detailed setting method reference behind the table)

#### Notes:

1. In normal conditions, transmission distance up to 500 meters by SYV-75-5 coaxial cable and no need amplification. For the high-frequency RF signal has signal attenuation, signal strength will become weakened after adding CATV network mixer and multi output.
2. If the signal frequency is high, the transmission attenuation is greater. So choose low channel for long-distance transmission. Otherwise, When the transmission distance is short (less than 100 meters), because the signal is too strong, receiver may protect and can't output normal. So now you should choose high channel or adding attenuator in coaxial cable for the signal attenuation.
3. If the output contents of the signal source contains HDCP key, the RF signal of the modulator output will automatically encrypted also. Then, If you use ordinary DVB-T receiver will not Decoding and output, only use the special receiver to the output normally.
4. With the channel set and frequency values refer to the table below, and channel selection switch setting method is as follows:



e.g.1 CH1 (0000 0001)

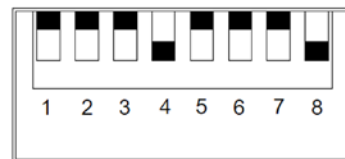

e.g.2 CH11 (0001 0001)

**Channel set and frequency reference table**

Channel ID	Switch Setting (12345678)	Frequency (MHz)	BW (MHz)	Channel ID	Switch Setting (12345678)	Frequency (MHz)	BW (MHz)
1	0000 0001	142.5	7	41	0100 0001	634	8
2	0000 0010	149.5	7	42	0100 0010	642	8
3	0000 0011	156.5	7	43	0100 0011	650	8
4	0000 0100	163.5	7	44	0100 0100	658	8
5	0000 0101	177.5	7	45	0100 0101	666	8
6	0000 0110	184.5	7	46	0100 0110	674	8
7	0000 0111	191.5	7	47	0100 0111	682	8
8	0000 1000	198.5	7	48	0100 1000	690	8
9	0000 1001	205.5	7	49	0100 1001	698	8
10	0001 0000	212.5	7	50	0101 0000	706	8
11	0001 0001	219.5	7	51	0101 0001	714	8
12	0001 0010	226.5	7	52	0101 0010	722	8
13	0001 0011	410	8	53	0101 0011	730	8
14	0001 0100	418	8	54	0101 0100	738	8
15	0001 0101	426	8	55	0101 0101	746	8
16	0001 0110	434	8	56	0101 0110	754	8
17	0001 0111	442	8	57	0101 0111	762	8
18	0001 1000	450	8	58	0101 1000	770	8
19	0001 1001	458	8	59	0101 1001	778	8
20	0010 0000	466	8	60	0110 0000	786	8
21	0010 0001	474	8	61	0110 0001	794	8
22	0010 0010	482	8	62	0110 0010	802	8
23	0010 0011	490	8	63	0110 0011	810	8
24	0010 0100	498	8	64	0110 0100	818	8
25	0010 0101	506	8	65	0110 0101	826	8
26	0010 0110	514	8	66	0110 0110	834	8
27	0010 0111	522	8	67	0110 0111	842	8
28	0010 1000	530	8	68	0110 1000	850	8
29	0010 1001	538	8	69	0110 1001	858	8
30	0011 0000	546	8	70	0111 0000	866	8
31	0011 0001	554	8	71	0111 0001	874	8
32	0011 0010	562	8	72	0111 0010	882	8
33	0011 0011	570	8	73	0111 0011	890	8
34	0011 0100	578	8	74	0111 0100	898	8
35	0011 0101	586	8	75	0111 0101	906	8
36	0011 0110	594	8	76	0111 0110	915	8
37	0011 0111	602	8	77	0111 0111	924	8
38	0011 1000	610	8	78	0111 1000	930	8
39	0011 1001	618	8	79	0111 1001	938	8
40	0100 0000	626	8	80	1000 0000	946	8

Switch setting note: 0-dial switch to the up, 1-dial switch to the down. In fact, the switch 8 bit code equals to the binary code of channel ID.

## SPECIFICATIONS:

## HDEX0011M1

HDMI resolution .....	24/50/60fs/1080p/1080i/720p/576p/576i/480p/480i
HDMI Audio Format.....	LPCM
RF frequency range.....	139~950 MHz
RF Channel B/W.....	7/8 MHz
The number of Channel.....	80
RF Output power.....	-6dBm
RF Connector type.....	The imperial F type/BNC
Coaxial cable Characteristic impedance.....	75Ω
Coaxial cable types.....	SYV-75/RG59 etc.
RF transmission distance.....	≤500m SYV-75-5 coaxial standard cable
TX Max working current .....	650mA
Power adapter format Input .....	AC 100V~240V 50HZ/60Hz, DC5V/2A
Operating Temperature range .....	-10 to +45°C
Storage Temperature range.....	-20 to +60°C
Operating Humidity range .....	10 to 90%RH (No Condensation)
Storage Humidity range.....	5 to 95%RH (No Condensation)
Case Dimension (L x W x H) .....	94x74x28 (mm)
Weight .....	120g

## Notes:

Pls use the machine as the instruction listed to keep the long use lifetime of the machine.

1. The machine should be placed at the spot far from the Damp, High-Temperature, Dusty, Erosive, and oxidative environment.
2. All parts will be free from the strong shake, hit, fall.
3. Touching the power adaptor with the wet hands is prohibited.
4. Pls hold the power adaptor head and do not pull the power cord when cut off from the socket.
5. Pls turn the power off when the machines not used for long time.
6. Pls do not open the cover and do not touch the inside parts.
7. Pls use the original factory power adaptor.

## FAQ:

Before power on, pls check the connection line carefully. And make sure that all interfaces are normally connected. The common trouble shooting way shows below:

No.	Problem Description	Solutions
1	Non-Power-Connected	<ol style="list-style-type: none"><li>1. Check if the power adaptor head is truly and correctly inserted the power socket.</li><li>2. Check the power if it is in on status.</li></ol>
2	Receiver search no signal	<ol style="list-style-type: none"><li>1. Confirm the coaxial cables are intact and reliable connection.</li><li>2. Confirm the length of coaxial cable is too short. When the transmission distance is short (less than 100 meters), you should choose high channel or adding attenuator in coaxial cable for the signal attenuation.</li><li>3. Confirm the TX and RX channel settings should be the same</li><li>4. Check the cable quality. ( Recommend use SYV-75/RG59 coaxial standard cable)</li></ol>
3	Receiver no Picture	<ol style="list-style-type: none"><li>1. Confirm the HDMI cable of TX is intact and reliable connection.</li><li>2. Check the signal source is power on and output normal.</li><li>3. Check the signal source output resolution, may be set too high.</li><li>4. Confirm the signal source whether contains HDCP key, use special receiver is recommended.</li><li>5. Check the HDMI cable quality.</li></ol>
4	Image mosaic/ Abnormal Picture	<ol style="list-style-type: none"><li>1. Confirm the coaxial cables are intact and reliable connection.</li><li>2. Confirm the length of coaxial cable is too short or long.</li><li>3. Device EDID read error, please reboot.</li><li>4. Nearby signal interference, proposals to change the other channel</li></ol>
5	Abnormal sound	<ol style="list-style-type: none"><li>1. Check the signal source output audio format is LPCM. Audio output options of signal source should be set to "Auto" or "LPCM"</li><li>2. Device EDID read error, please reboot.</li></ol>



